

KAWASAKI ZX-10R/RR '21-

M O U N T I N G I N S T R U C T I O N S

VIDEO

REF 20543

DOWNFORCE RACE SPOILERS



1 Person








15 min



EASY

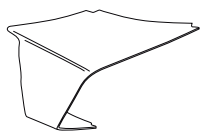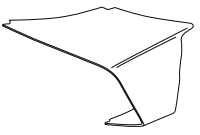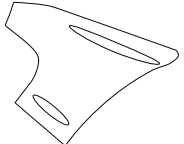

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Pieza soporte aleron (tamaño pequeño)	Spoiler support piece (small size)	2	SOPOR-I---20431
2		Pieza soporte aleron (tamaño grande)	Spoiler support piece (big size)	2	SOPOR-S---20431
3		Alerón derecho	Right spoiler	1	20543N/V/HM3
4		Alerón Izquierdo	Left spoiler	1	20543N/V/HM3
5		Plantilla Electrostática	Electrostatic Template	1	PLANTILLA-20543

KAWASAKI ZX-10R/RR '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


ASSEMBLY
MONTAJE

Se muestra el montaje del lado derecho a modo de ejemplo, realizar los mismos pasos para el montaje del lado izquierdo.
The right side assembly is shown as an example, so the same steps can be performed for the left side assembly.



**CLEAN THE SURFACE
WITH ALCOHOL.**

**CHECK IS COMPLETELY DRY
BEFORE START.**

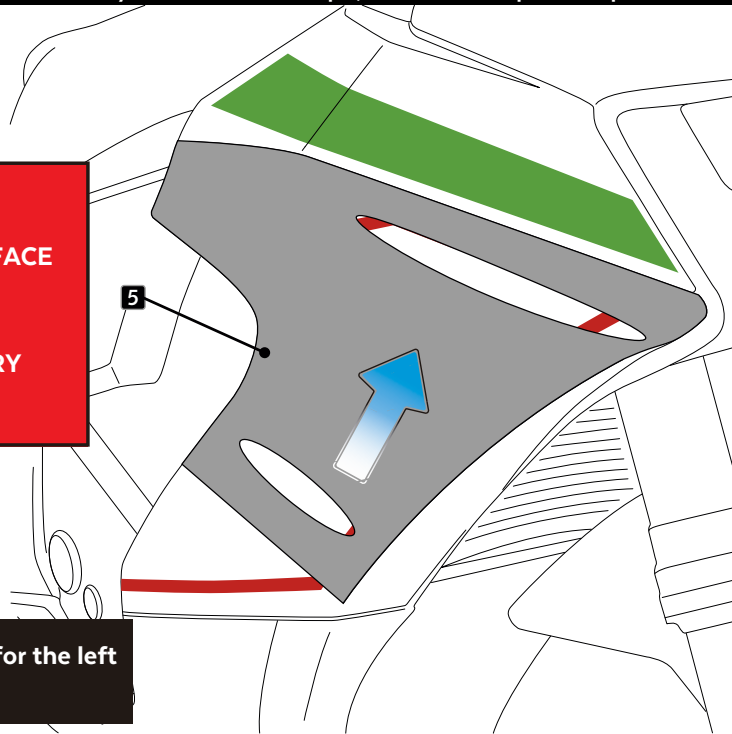


5 Use the same template for the left and right side



2

ASSEMBLY
MONTAJE

2.1 DOBLAR LOS EXTREMOS DE LA PIEZA
FOLD THE ENDS OF THE PIECE

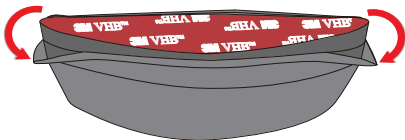

2.2 EXTRAER PAPEL DEL ADHESIVO 3M
REMOVE PAPER FROM 3M ADHESIVE

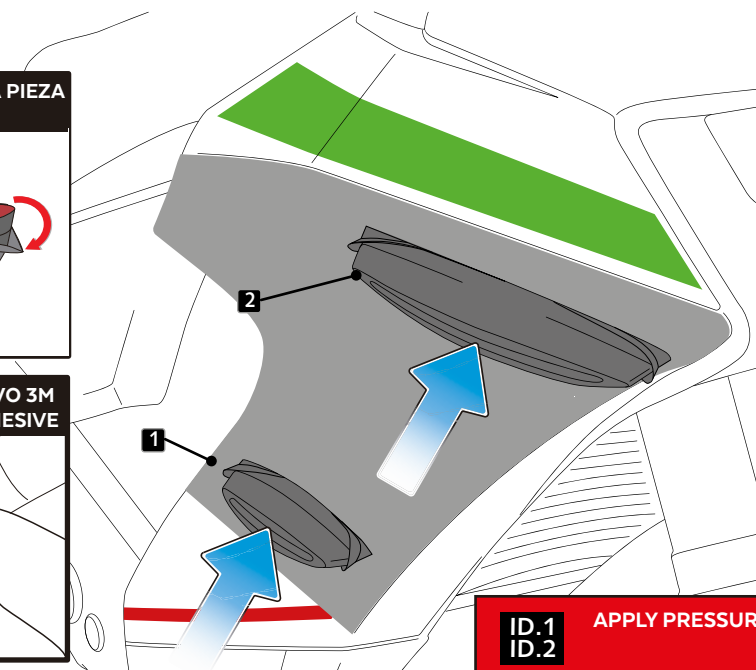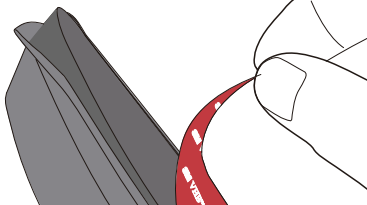

**ID.1
ID.2**

**APPLY PRESSURE ON ADHESIVE AREA FOR
1 MINUT**

KAWASAKI ZX-10R/RR '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

3

ASSEMBLY
MONTAJE

WAIT 24 HOURS



CHECK THE CORRECT ADHESION
OF THE 3M DOUBLE SIDE
SELF-ADHESIVE TAPE
TO THE FAIRING. ENSURE THAT
THE ENTIRE SURFACE
IS WELL ADHERED

4

ASSEMBLY
MONTAJE

EXTRAER PLANTILLA ANTES DE
MONTAR EL ALERÓN.

ID5

REMOVE TEMPLATE BEFORE
ASSEMBLY THE SPOILER

